

FIG.1(A) RECORDING START
PUSH BUTTON SWITCH

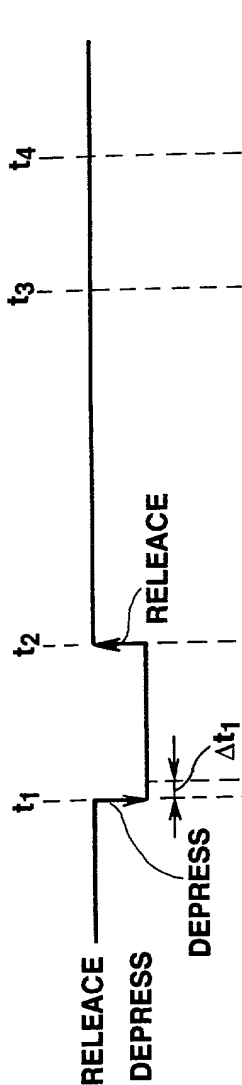


FIG.1(B) RECORDING STOP
PUSH BUTTON SWITCH



FIG.1(C) KEY CLICK SOUND



 
FIG.1(D) MICROPHONE INPUT




FIG.1(E) RECORDING INTERVAL



FIG.1(F) RECORDED RESULT



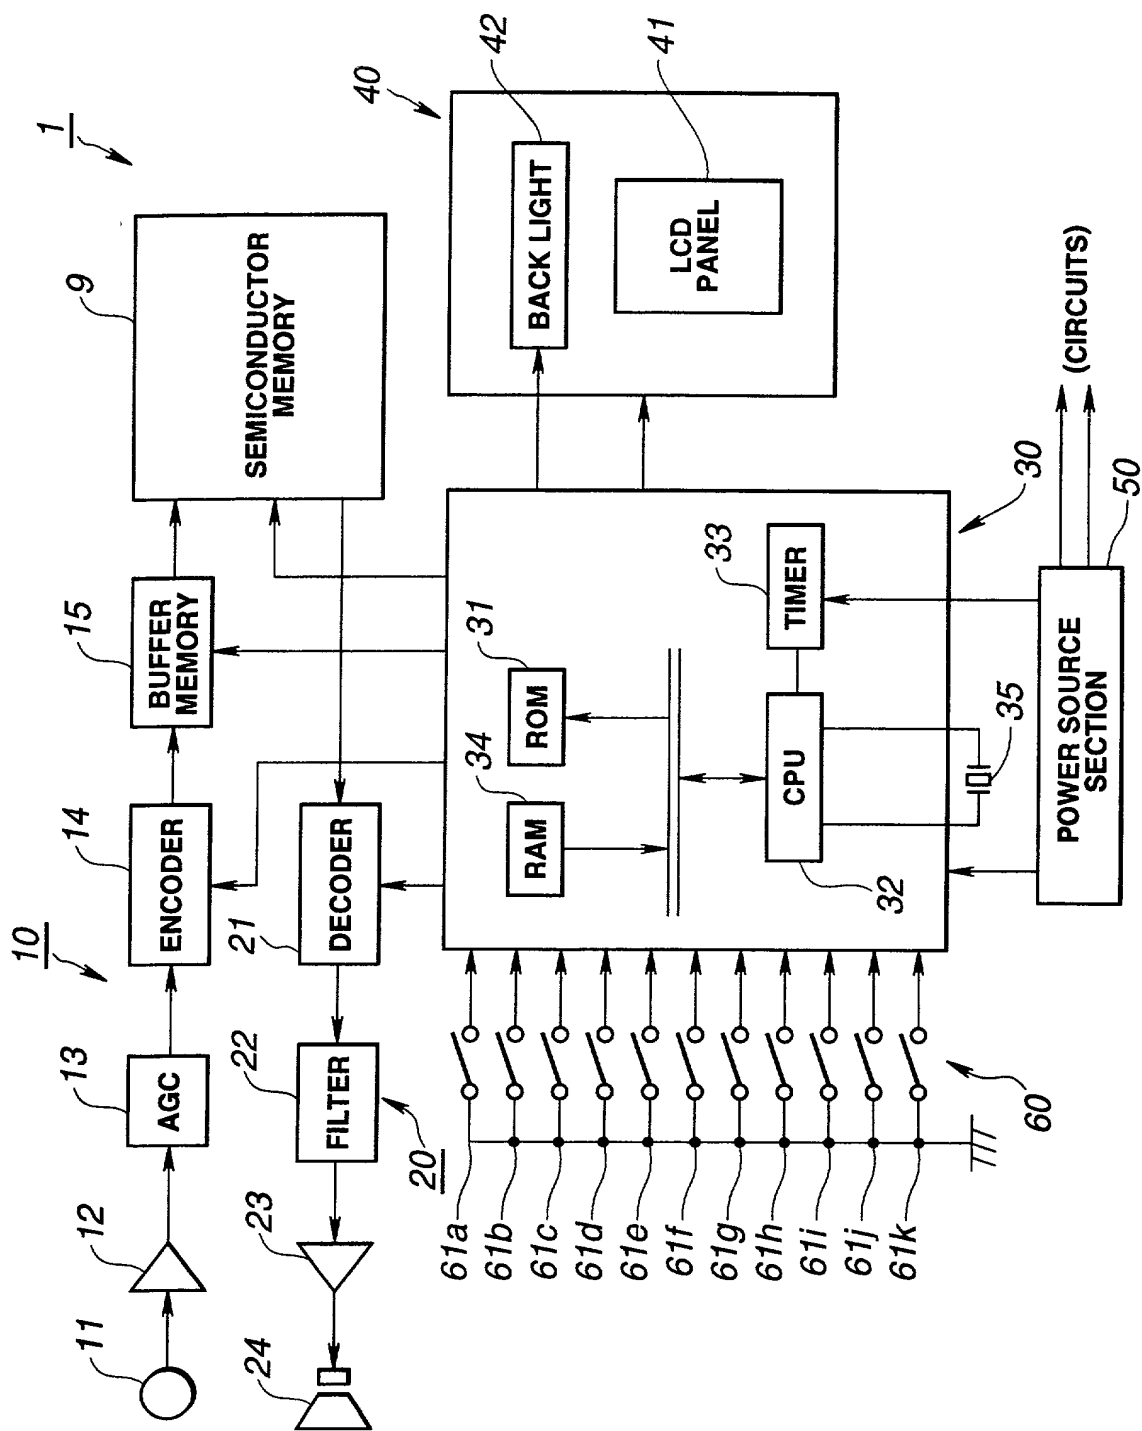

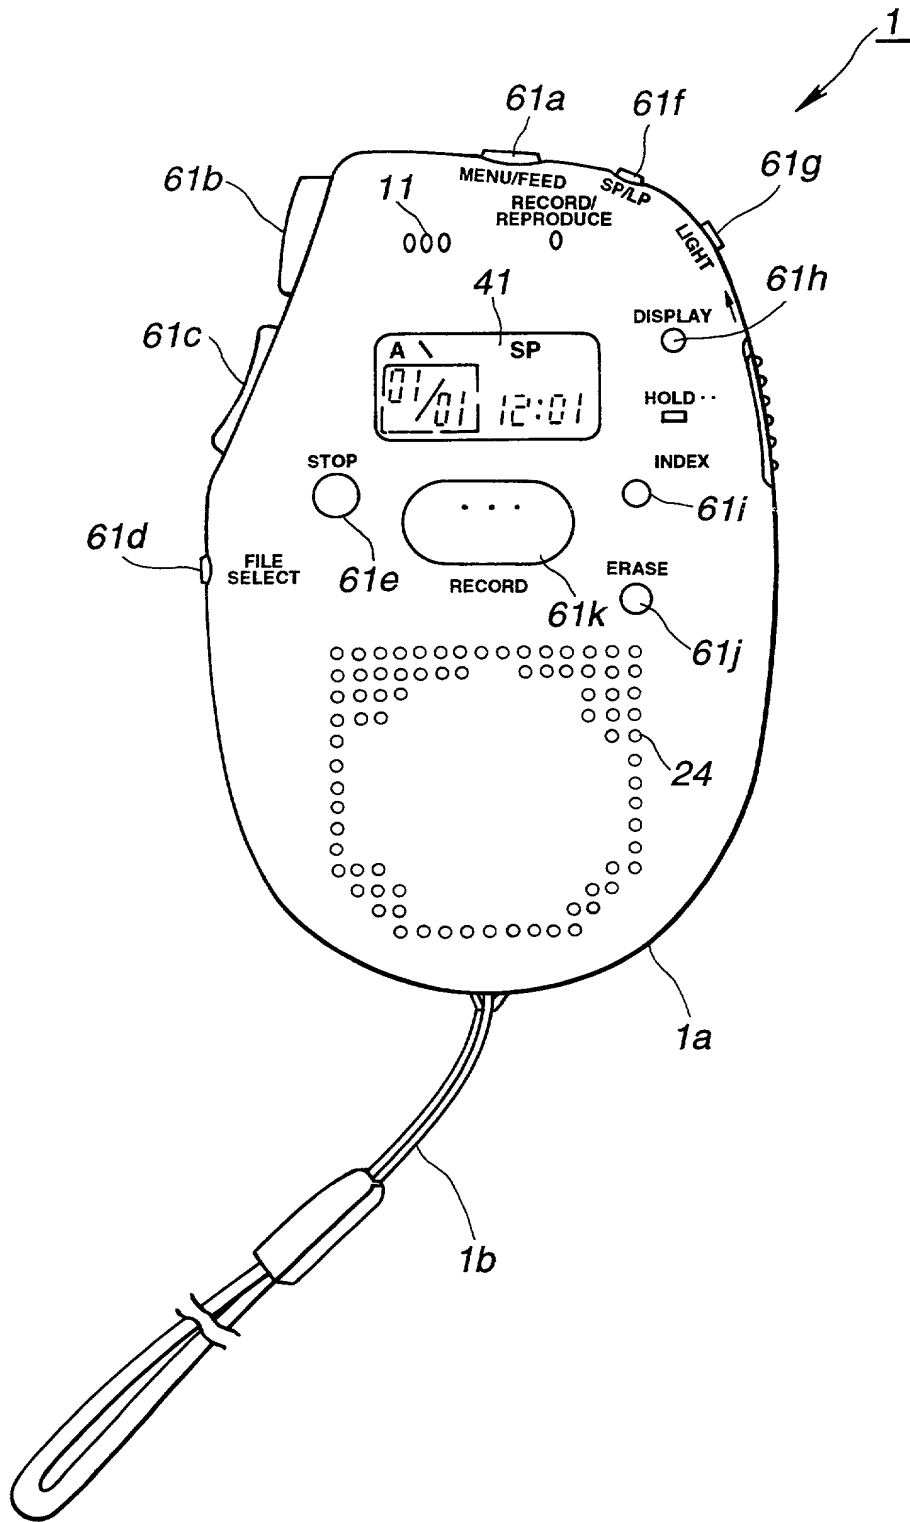


FIG.3

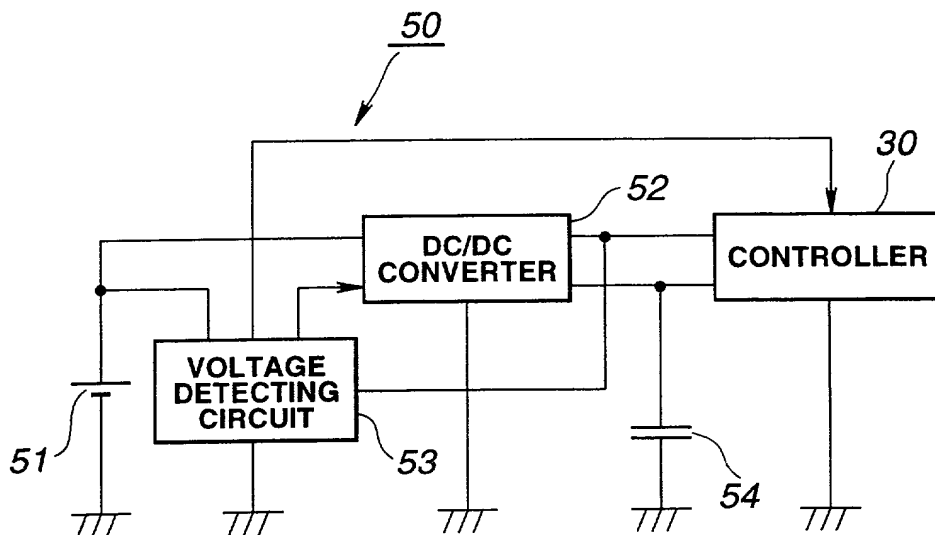


FIG.4

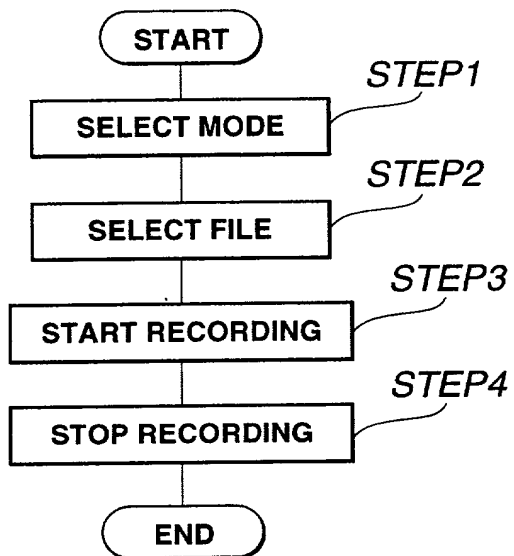


FIG.5

FIG. 6(A) RECORDING START
PUSH BUTTON

FIG. 6(B) STOP PUSH BUTTON


FIG. 6(C) CLICK SOUND

FIG. 6(D) MICROPHONE INPUT

FIG. 6(E) BUFFER MEMORY
OUTPUT

FIG. 6(F) RECORDING INTERVAL

FIG. 6(G) RECORDED RESULT

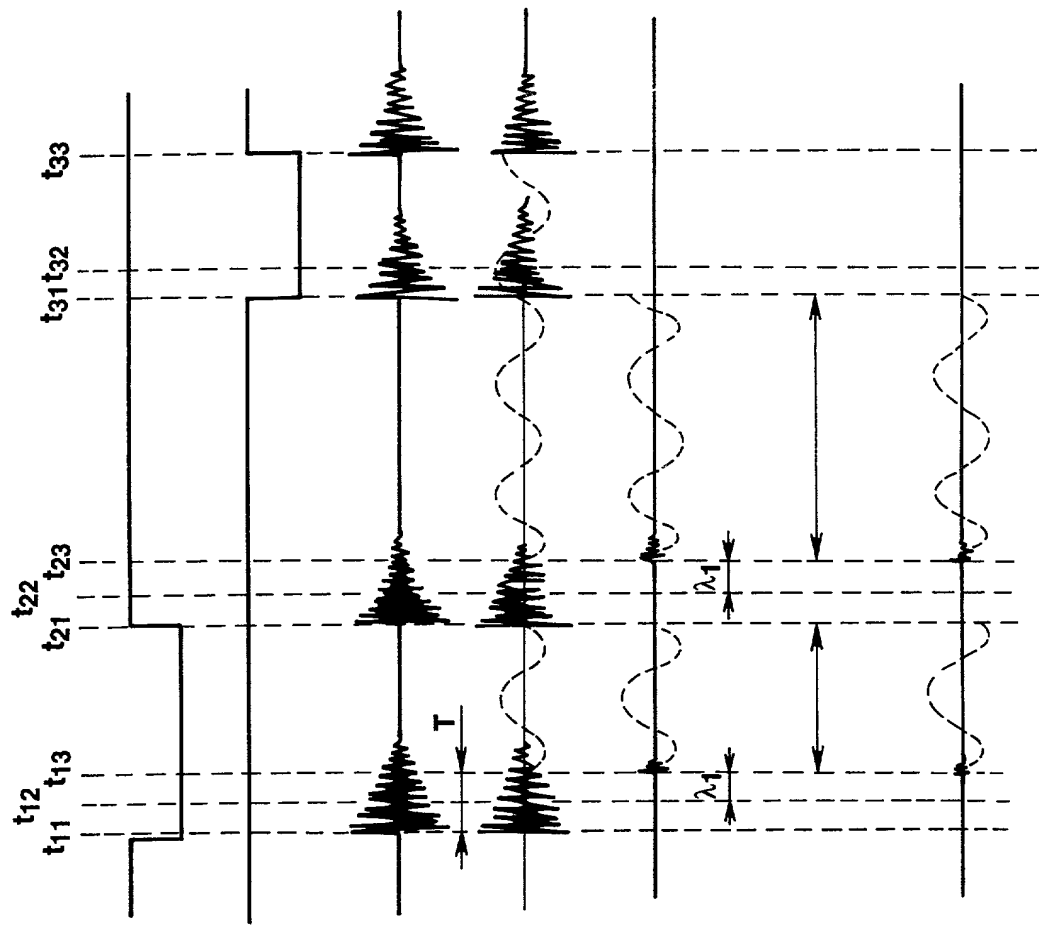

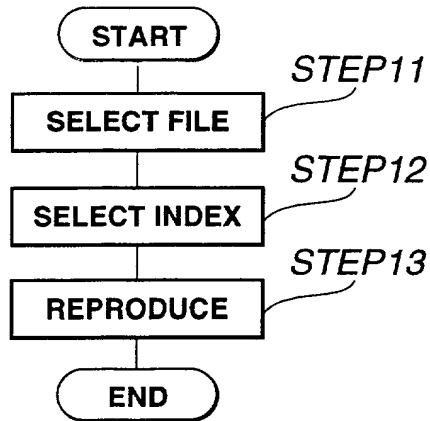


FIG.7

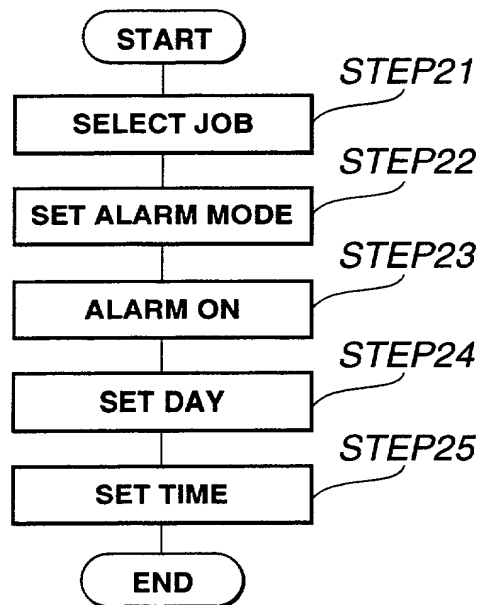


FIG.8